

## Firmware update download/burn instructions

System requirements: a computer with writable disc drive and image burning software, a blank, recordable CD-R, DVD-R, or DVD+R, and broadband Internet access. This option is not recommended with dial-up or DSL service.

### First: download the update file

1. Click [here](#) to download the update file. If a pop-up window opens telling you to open, save or cancel, click **Save** and save the file to your desktop. If you save it to another location, make note of where that is.

Note: File size is approximately 35 MB. Estimated download time is 3-4 minutes (with a 1.5 Mbps broadband connection).

2. Insert a blank, recordable CD-R, DVD-R, or DVD+R into your computer's writable disc drive. If a CD pop-up window opens, close it.

### Second: burn a CD or DVD from the update file

1. Click on the file located on your desktop or open a file manager (such as Windows Explorer) and find the file you downloaded.
2. Double-click the update file, then follow the on-screen instructions to finish the burning process.

**Note:** This step works only on computers that have appropriate image burning software installed. If this step does not work for you, call Insignia Customer Support at (877) 467-4289 to order a free update CD.

**Note:** This step requires that you burn, create or copy an image (not data) file but your image burning software may call it something else. Refer to your software's online help for information on how to burn an ISO file.

- **OR** – (if double-click method above does not work)

*If you run Windows and have Cyberlink's Power 2 Go installed on your computer:*

1. Open Power 2 Go and click **Copy Disc** under the list of burning options.
2. Follow the on-screen instructions to burn the image to a CD.

*If you run Windows and have Roxio's Easy Media Creator® installed on your computer:*

1. Open Easy Media Creator and click **Copy CD** under the list of options.
2. Follow the on-screen instructions to burn the image to a CD.

*If you run Windows and have Nero 9 CD/DVD Burner installed on your computer:*

1. Open CD/DVD Burner and click **File**, then **Burn Image**.
2. Follow the on-screen instructions to burn the image to a CD.

*If you run Windows and have Sonic RecordNow! 7 installed on your computer:*


1. From the main menu, click the **Backup Projects** tab, and click **Burn Image**.
2. Click **Browse**, find the file you downloaded and click **Add**, then click **Burn**.

*If you have any other image burning software installed on your computer, follow the software's online help instructions to create a disc from the downloaded update file.*

**Note:** Instructions will vary with operating system and software version. If instructions provided here do not help, call the call Insignia Customer Support at (877) 467-4289 to order a free update CD.

## Last: install the update

- 1 Turn on your TV and Blu-ray DVD player.
- 2 Eject any discs that are in the player and turn the player off.
- 3 Turn on the player and insert the CD containing the update file into your player. Installation starts automatically.
- 4 Watch your TV screen for the startup screen.

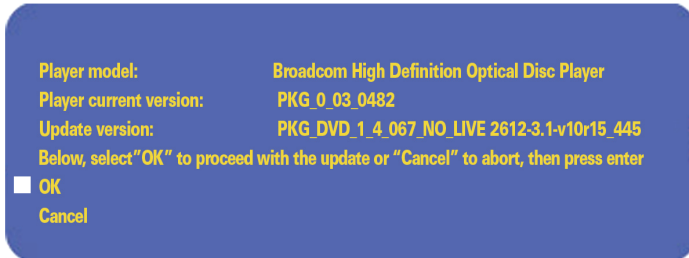

**EXAMPLE**

- 5 Select **OK**, then press **ENTER** on the remote control that came with your Blu-ray player. The update progresses automatically.



**EXAMPLE**

**IMPORTANT:** Do not turn off power while update is in progress.

A screen will let you know when installation is complete.



**EXAMPLE**

- 6 Remove the disc and press **ENTER** on your player's remote control. The tray closes and your player restarts. If it does not automatically do this, turn your player off, then on again.