


Firmware update download/burn instructions

System requirements: a computer with writable disc drive and image burning software, a blank, recordable CD-R, DVD-R, or DVD+R, and broadband Internet access. This option is not recommended with dial-up or DSL service with a bit rate lower than 256kbps.

First: download the update file

1. On the back of your unit look for a bar code (see photo). On the bottom of the sticker locate the code that starts with **E5E**, then download firmware version **E5E25UD1108FA1.iso**. If the code starts with **E5H**, then download firmware version **E5H25UD1108FA1.iso**. If a pop-up window opens telling you to open, save or cancel, click **Save** and save the file to your desktop. If you save it to another location, make note of where that is.

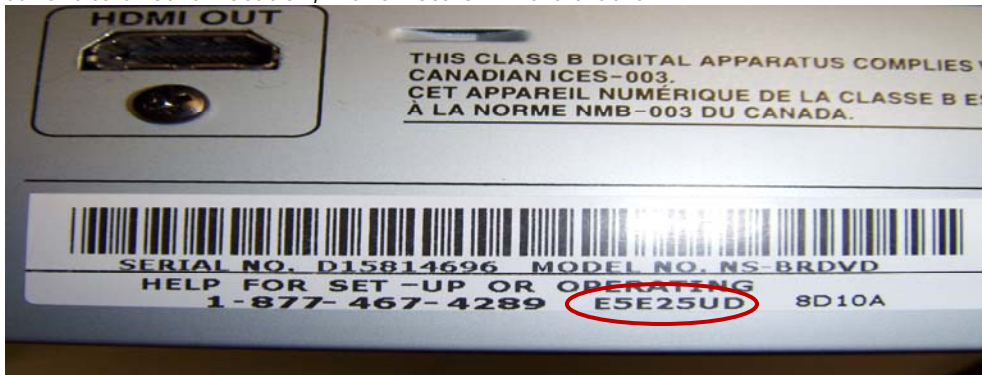

Note: File size is approximately 32 MB. Estimated download time is 3-4 minutes (with a 1.5 Mbps broadband connection).

2. Insert a blank, recordable CD-R, DVD-R, or DVD+R into your computer's writable disc drive. If a CD pop-up window opens, close it.

Second: burn a CD or DVD from the update file

1. Click on the file located on your desktop or open a file manager (such as Windows Explorer) and find the file you downloaded.
2. Double-click the update file, then follow the on-screen instructions to finish the burning process.

Note: This step works only on computers that have appropriate image burning software installed.

Note: This step requires that you burn, create or copy an image (not data) file but your image burning software may call it something else. Refer to your software's online help for information on how to burn an ISO file.

- **OR** - (if double-click method above does not work)

If you run Windows and have Cyberlink's Power 2 Go installed on your computer:

1. Open Power 2 Go and click **Copy Disc** under the list of burning options.
2. Follow the on-screen instructions to burn the image to a CD.

If you run Windows and have Roxio's Easy Media Creator® installed on your computer:

1. Open Easy Media Creator and click **Copy CD** under the list of options.
2. Follow the on-screen instructions to burn the image to a CD.

If you run Windows and have Nero 9 CD/DVD Burner installed on your computer:

1. Open CD/DVD Burner and click **File**, then **Burn Image**.
2. Follow the on-screen instructions to burn the image to a CD.

If you run Windows and have Sonic RecordNow! 7 installed on your computer:

1. From the main menu, click the **Backup Projects** tab, and click **Burn Image**.
2. Click **Browse**, find the file you downloaded and click **Add**, then click **Burn**.

If you have any other image burning software installed on your computer, follow the software's online help instructions to create a disc from the downloaded update file.

Note: Instructions will vary with operating system and software version.

FIRMWARE RENEWAL MODE (for User)

1. Turn off the power of BD-Player.
2. Press [OPEN/CLOSE] to turn on the power of BD-Player. The tray will open automatically.
3. Load the disc for version up. Fig. A appears on the screen and Fig. B appears on the VFD.

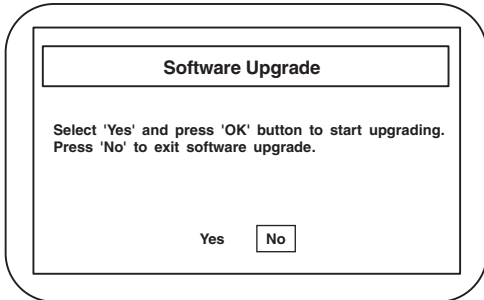


Fig. A

UPDATE

Fig. B

4. Press [OK] to carry out "YES". The display will be replaced by Fig. C and Fig. D.

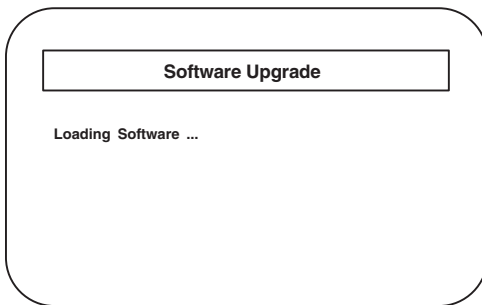


Fig. C

CHECKSW

Fig. D

5. Load the disc for version up. The display will be replaced by Fig. E when it finishes reading the data of the disc.

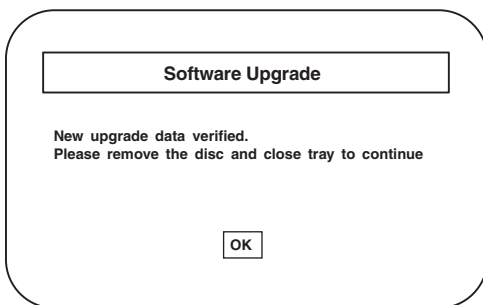


Fig. E

6. Please remove the update disc, and press [OK]. The tray will close automatically.

7. When the tray has closed, it will renew data automatically. Then the display is replaced by Fig. F. Progress degree is displayed like Fig. G on VFD.

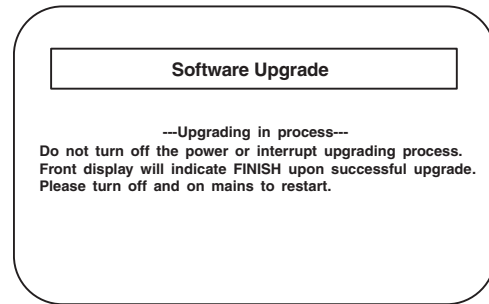


Fig. F

26%

Fig. G

8. After programming is finished, Fig. H appears on the VFD.

FINISH

Fig. H

9. Unplug the AC cord from the AC outlet. Then plug it again. The player menu language is maintained, and the other items are set by default.